 



AUDIO SYSTEM QUICK REFERENCE GUIDE

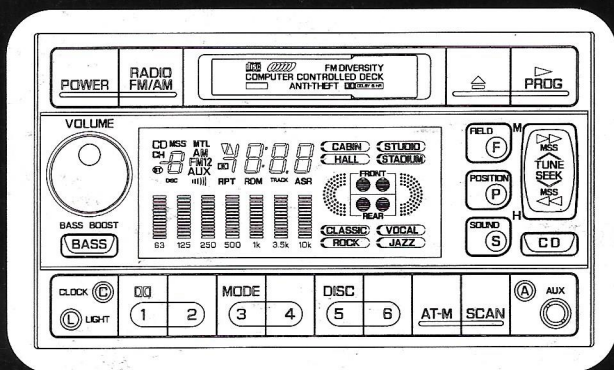

Mitsubishi 3000GT
(Audio Model RX367CWY)

Mitsubishi Diamante
(Audio Model RX367L)

 RADIO

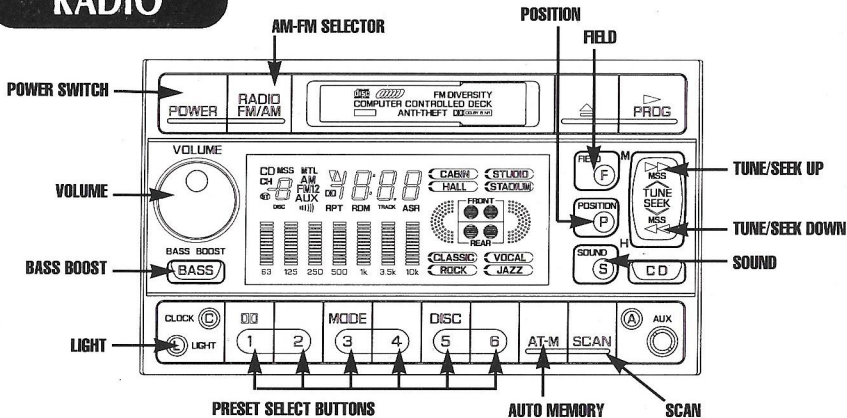


TO FIND YOUR FAVORITE STATION: TUNE/SEEK



- Manual Tuning – Push and release the button (up or down) within 0.5 seconds. The radio will step (up or down) to another frequency.
- Seek Tuning – Push the button for longer than 0.5 seconds. The radio will begin seeking (up or down) the next station.

SCAN

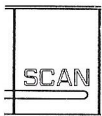


- Push the button – The radio will automatically seek a station of the nearest higher frequency and will stop on reception. After the station is held for five seconds, seeking will resume.
- To hold a certain station, push the button again.

AUTO MEMORY




- Up to 30 stations can be memorized in auto-memory: 10 each in AM, FM1, FM2.
- Push the AT-M button until a beep is heard. This locates nearby stations and stores their frequencies in memory.
- Push the button within 1.5 seconds. The next-memorized station will be selected.
- When no additional stations are stored in memory, the screen will display - - -.

TO PRESET A STATION:

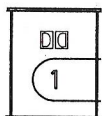


- Select a station, then push a station button (1 to 6) until a beep is heard.
- To recall a preset station, quickly push and release (within 1.5 seconds) the button.

TAPE

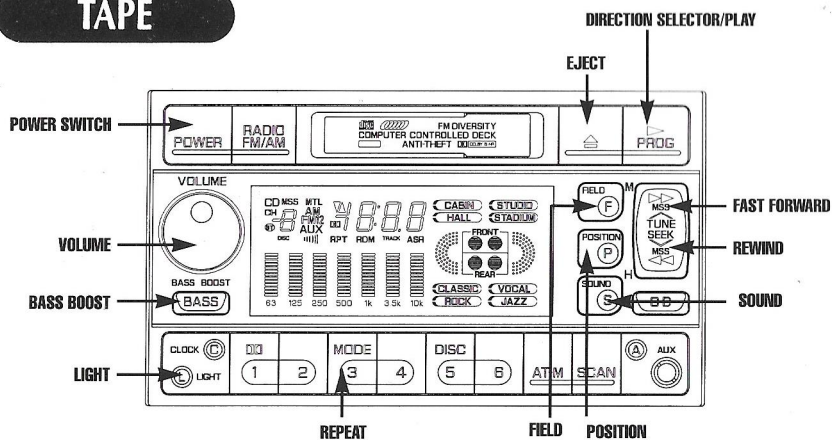


TO FAST FORWARD/REWIND:

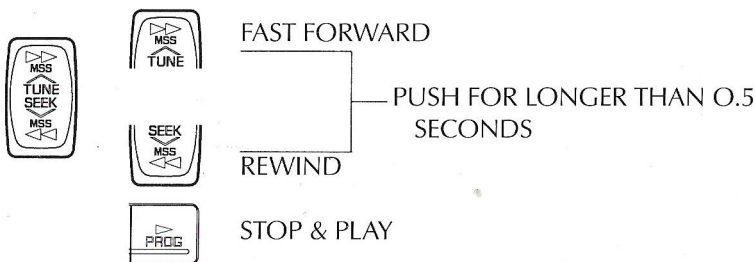 

TO QUICKLY ACCESS A DESIRED SELECTION:




- Push the button once. The tape player will skip to the next selection.
- Push the button twice. The tape player will skip forward two selections.

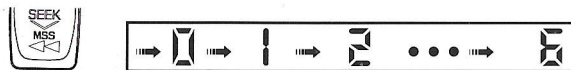


- Push the button once. The tape player will rewind to the previous selection.
- Push the button twice. The tape player will rewind two selections.

TO REPEAT A SELECTION:

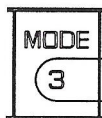

- Push the button. When the selection is finished, the tape will automatically rewind to its beginning.

CD CHANGER

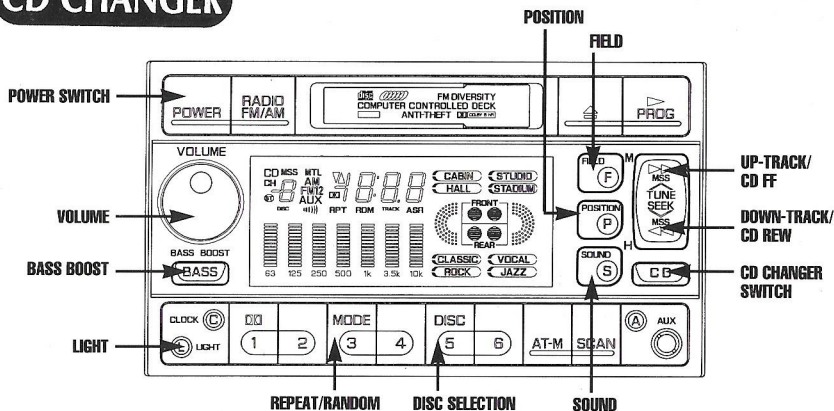

TO CONTROL CD CHANGER


- Push CD Changer Switch.

TO SELECT A DIFFERENT CD:



- Push the  button to select a different disc.

TO CHANGE THE SELECTION:

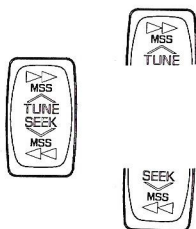

- Push the button once. The player will start playing at the next selection.
- Push the button twice. The player will start playing at the second selection.
- Push the button once. The player will start at the previous selection.
- Push the button twice, the player will go back two selections.


TO FAST FORWARD/REVERSE:



- Fast Forward — Push and hold the appropriate button to fast-forward/reverse the disc.
- Fast Reverse —


Releasing the button resumes play from that position.

TO SELECT REPEAT OR RANDOM PLAY:

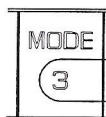

- Push the button once; the selection will repeat.
- Push the button again; the selection will be random.
- Push the button again to return to normal playing mode.

OTHER FEATURES

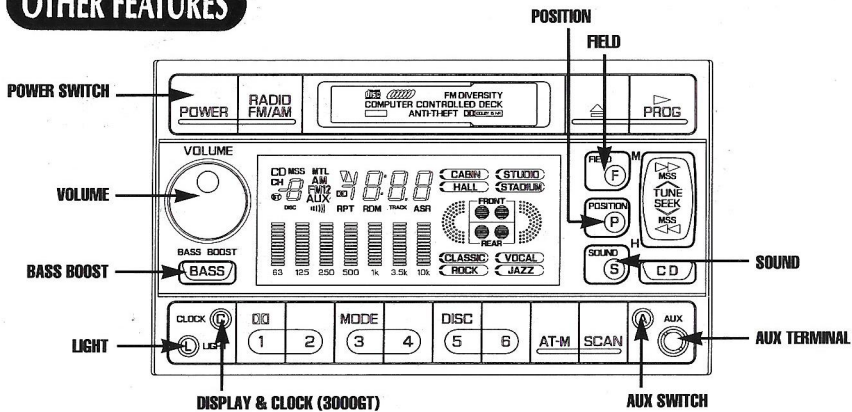

TO SET "POSITION"



By pushing the button, position will change from "All" to "Driver" to "Front" to "Rear."

Diamante: All → Driver → Front → Rear


3000 GT: All → Driver → Front

TO ADJUST FADER




 
VOLUME



- Push  button until a beep is heard.
- Adjust the fader between front and rear speakers with the volume control.
- If you don't use the volume button within ten seconds, it will resume its normal function.
- You can adjust the fader for each position (All, Driver, Front, and Rear).

TO USE AUX TERMINAL

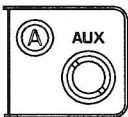

- You can connect an external unit (i.e. portable CD player) to the AUX terminal. Insert the appropriate jack and push the  button.
- When the jack is removed, the AUX mode is released.